


How To Connect WiFi

A5S support only: Ralink RT5370& Realtek RTL8188SU

Step 1: Put USB WiFi, Bellowing info will show.

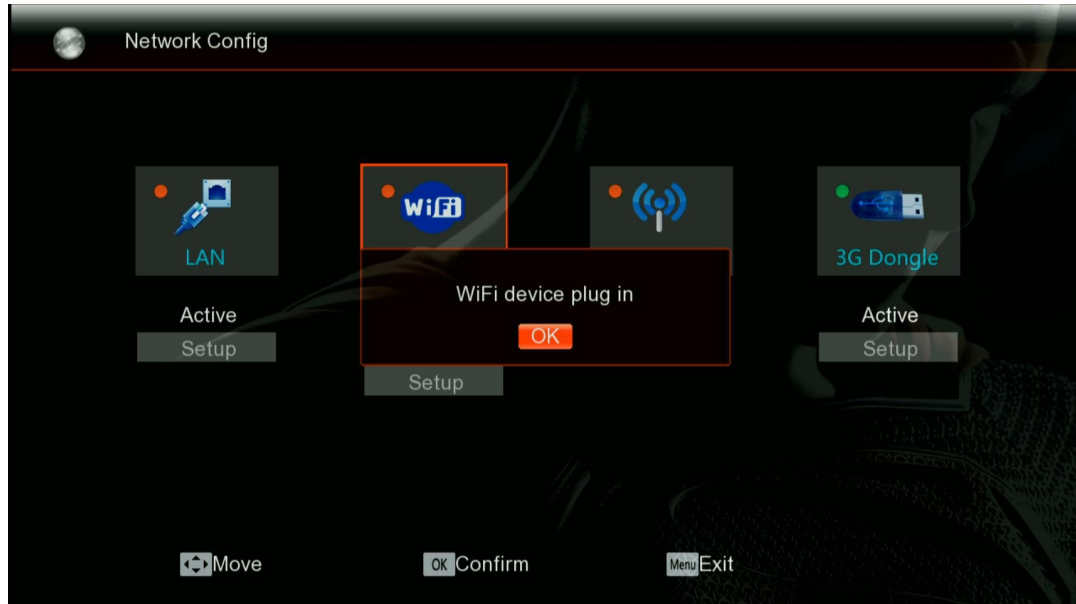

Select WiFi in Network Config



Step 2: Go **WiFi Manager** Searching for signal.




State:


Red button manually refresh the Wifi connection list




Blue button manually input connection IP address

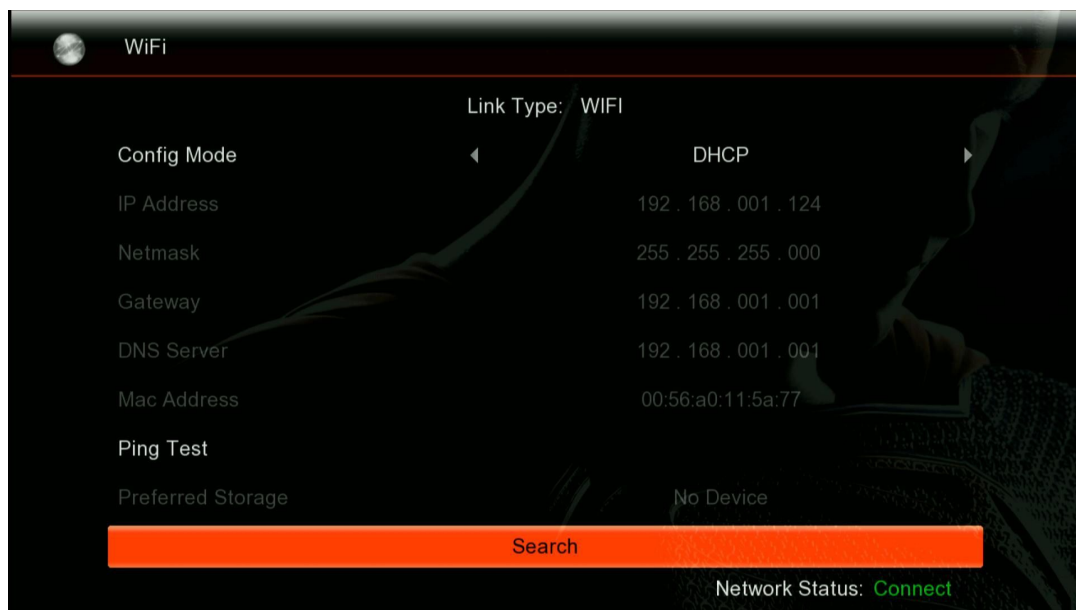


Step 3: Select SSID and put PASSWORD,

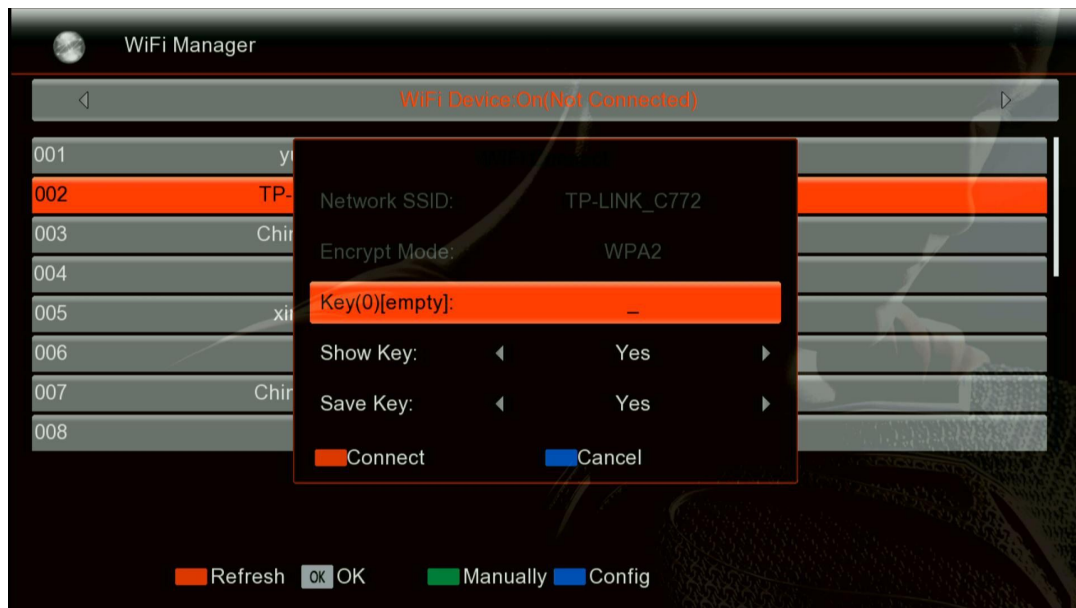

Press **YELLOW** key to **Save&Exit**.

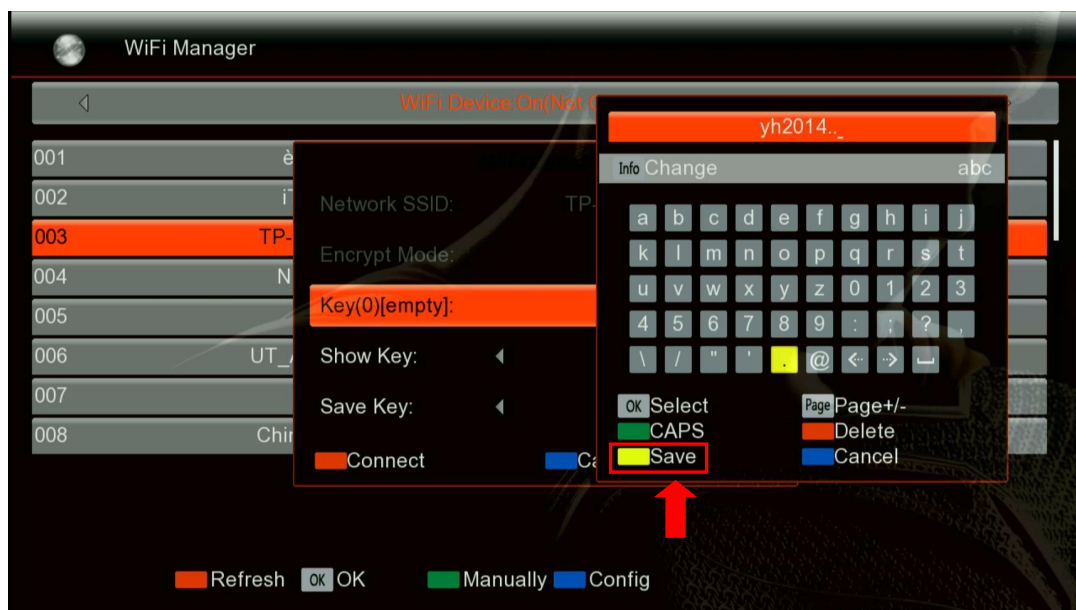

Step 4: Press **Red** Key to Connect.

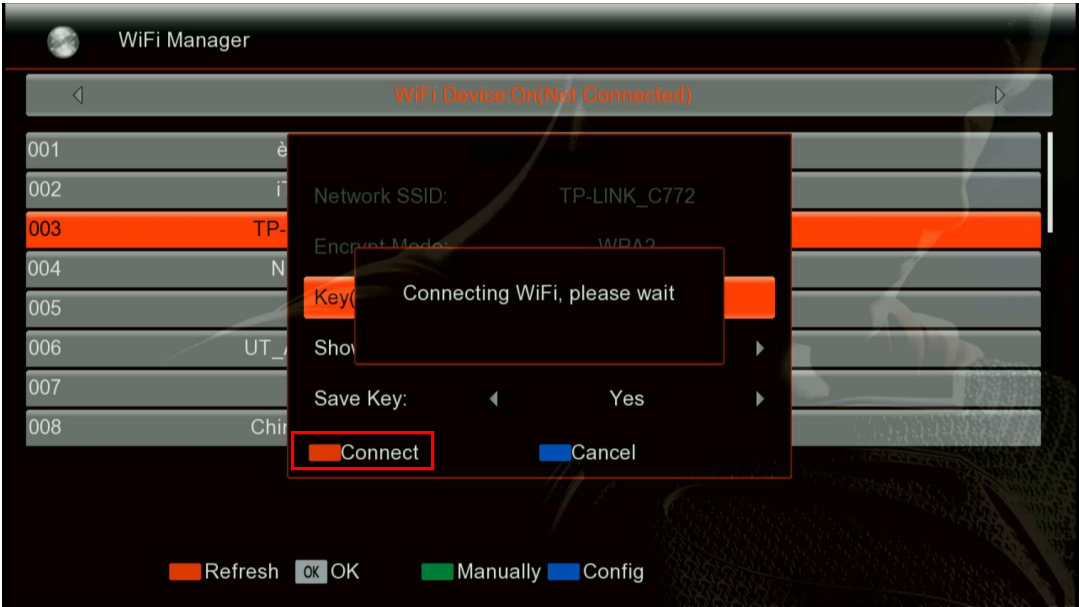

It will show **Connect** when success.

